

Instruction Manual

DRUM GRAB



Note: The Owner/Operator must read carefully and understand all the information presented here before operation.

Contents

- 1. General Safety Information**
- 2. Operation**
- 3. Maintenance**

THANK YOU FOR CHOOSING OUR DRUM GRAB. FOR YOUR SAFETY AND CORRECT OPERATION, PLEASE CAREFULLY READ THE MANUAL BEFORE USE.

NOTE: All of the information reported herein is based on data available at the time of printing. The factory reserves the right to modify its own products at any time without notice or incurring in any sanction. Please verify with the factory for possible updates.

1. General Safety Information

1. Do not use your unit for loads exceeding the rated capacity.
2. Before using the drum grabs, contact the manufacturer of your industrial truck, and obtain their approval that the truck has the capacity to be used with these attachments.
3. Do not use the drum grabs with manually operated stackers.
4. Do not use the dram grabs to lift personnel or to carry loads over people.
5. Do not leave with a load suspended in air unattended.
6. Do not remove or obscure capacity/warning label.
7. Do routine check before use. Remove unit from service immediately if damaged or malfunctioning until such time as repairs have been made.
8. Do not modify this product in any way.

2. Operation

1. Place unit on floor or flat surface easily accessible to fork truck. Be sure that “T” bolts are sufficiently unthreaded to allow forks to enter pockets.
2. Carefully slide forks (do not use fork extensions) into drum grab’s

fork pockets. Be sure forks are in pockets as far as possible.

Note: *It is necessary to insert the forks of forklift truck into the end of the fork holes.*

3. Manually tighten “T” bolts to secure unit to forks (hand tool may be used but is not necessary).
4. Raise unit and approach drum so that the jaws come in contact with the drum just below the upper rolling rib of the drum.
5. Move unit forward onto drum, lowering jaws slowly as you move. Jaws will open and close around drum.
6. When jaws surround drum, raise forks until jaws rest under upper rolling rib. Drum can now be raised and moved where desired.
7. To release drums, return to floor, lowering drum grab slowly as you pull back.

3. Maintenance

1. Do routine check of the opening flexibility of clamps. If necessary, lubricate moving parts periodically.
2. It is necessary to leave drum grab in an appropriate place to prevent rusting.